

PROMINI 30P

Stick Vacuum Cleaner



USER GUIDE



CE

A.F. Company
MACHINE

SECTIONS OF THE DEVICE / PARTS OF THE DEVICE

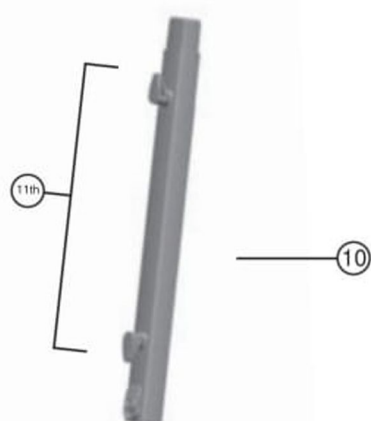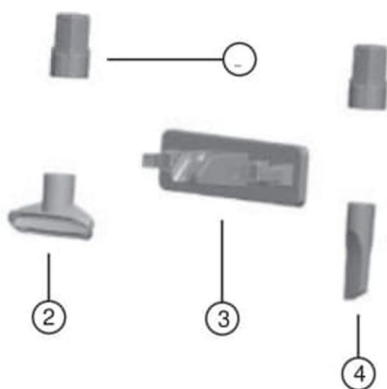


SAFETY RULES

**WARNING: READ BEFORE USING THE DEVICE
IF THESE INSTRUCTIONS ARE NOT FOLLOWED,
ANY WARRANTY IS VOID.**

- Use the Phantom PROMINI 30P Dry Type Vacuum Cleaner for its intended purpose and for dry cleaning only. Do not use to absorb water or other liquids.
- Always use original spare parts and accessories to protect the safety of your device. from the use of unsuitable parts.
Warranty will not be valid for malfunctions caused. For repair and spare parts, apply to the nearest FANSET authorized service.
- Do not use the device with a damaged cable.
- Do not vacuum harmful dust.
- Never use your device without a motor protection filter. • Do not leave the plug of your cleaner plugged into the socket. When you are finished, turn off the device and remove the plug from the socket. Do not handle the plug with wet hands.
- If your appliance does not work for any reason, if there is any damage on the cable and plug, do not operate the vacuum cleaner and apply to the nearest FANSET authorized service.
- Do not carry your device by holding the cable.
- Only use the device as described in the user manual,
Do not use for any other purpose.
- Do not wash your vacuum cleaner with substances such as hot ash, razors and nails, and flammable liquids and
Do not use for cleaning oils.
- Do not use the vacuum cleaner and its cord from stove, oven and similar heat.
Keep away from sources.
- Never use your device in or near explosive atmospheres and materials.
- In order to prevent the filters of your device from clogging and to extend the engine life; flour, drill powder, gypsum powder etc. Do not vacuum dust.
- Do not wash the engine compartment with water, do not immerse it in water or similar liquids.
- It can be used by children aged 8 years and above, and people whose physical, emotional or mental capabilities are not fully developed or who lack experience and knowledge, as long as they are supervised or trained in the safe use of your device and its hazards. Children should not play with the device. Cleaning and user maintenance should not be performed by children unless they are supervised. Children under the age of 3 who are not under constant supervision should be kept away.
- Do not allow your device to be used as a toy by children and ensure that it is not used.

ASSEMBLY AND DRY VACUUMING

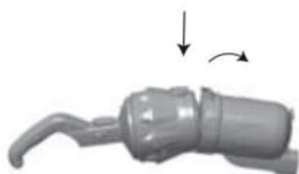

Before using your device, as seen in the picture, on the motor body; Make sure that the cloth dust filter is installed in the dust chamber by pressing the body lock latch, if it is not, insert it.



Cloth dust filter; Use the dust bin by attaching it to the tabs on the filter cage plastic as seen in the picture.



Make sure that the body lock latch is locked by assembling the motor body and the dust container as shown in the picture.

FIGURE 1



FIGURE 2



FIGURE 3




To lock the extension and the handle to the motor body, lock the lock slots by pushing them in opposite directions. You can use the extension tube of your device on the upper part as in Figure 1, on the lower part as in Figure 2 or without attaching the extension tube as in Figure 3. You can attach the appropriate sweeper apparatus according to the surface you want to clean, or you can perform sweeping operations without attaching any apparatus.

CLEANING AND STORAGE



NOTE: Before cleaning your device, always pull the plug from the socket.

For cleaning, firstly, open the bottom cover of the dust container and ensure that the dust is emptied into the trash.

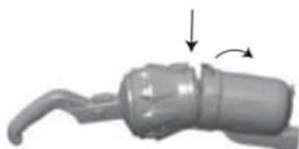

Then, detach the dust container from the motor body by pressing the body lock latch as shown in the picture.



Pull out the cloth dust filter inside the dust container and clean the filter by shaking it.

If your dust filter is excessively dusty, wash it with water only and dry it after washing.

Place your cleaned and dried filter on the tabs on the filter mesh plastic for reuse.



Place the ready cloth dust filter into the dust chamber and attach the dust chamber to the motor body.



NOTE: Do not wash the motor body of the device, do not immerse it in water. Wipe clean.

You can also clean other accessories of your device by deleting them.

You can easily wrap the power cable on the extension tube as shown in the picture.

You can store your device without taking up space by attaching it to the broom hanger that you mount on the wall in your home or office as seen in the picture.

CONSUMER RIGHTS


- All of the goods, including all parts (excluding breakages caused by usage errors), are under the guarantee of our company.
- In case the product fails within the warranty period, the time spent in repair is added to the warranty period. The repair time of the goods is a maximum of 20 working days. This period starts from the date of notification of the malfunction of the goods to the service station, or in the absence of a service station, to one of the seller, dealer, agency, representative, importer or manufacturer of the goods. If the defect of the goods is not corrected within 10 working days, the manufacturer or importer; Until the repair of the good is completed, it has to allocate another good with similar characteristics to the use of the consumer.
- In case the goods are found to be defective, the consumer, in Article 11 of the Consumer Protection Law No. 6502;
 - Withdrawing from the contract,
 - Requesting a discount from the sales price,
 - Requesting a free repair,
 - He may use one of his rights to request that the sold product be replaced with a non-defective one.
- In case the consumer chooses the right to free repair; It will be repaired without any charge under any other name such as labor cost, replacement part cost or any other name.
- In case the consumer uses the right to free repair;
 - Failure again within the warranty period,
 - Exceeding the maximum time required for repair,
 - In cases where it is determined by a report by the authorized service station, seller, manufacturer or importer that it is not possible to repair, the consumer may request a refund of the price of the goods, a reduction in the amount of the defect or, if possible, the replacement of the goods with a non-defective one.
- The parts that lose their function due to aging and wearing pollution due to consumables and usage, and damage and malfunctions caused by the loss of function of these parts are not covered by the warranty.
- Due to the use of the product contrary to the issues in the user manual. Defects caused are out of warranty.
- Damages and malfunctions caused by misuse are covered by the warranty. is outside.
- Voltage low or excess, faulty electrical installation, different voltage Defects caused by use are not covered by the warranty.
- Defects resulting from repairs made by unauthorized persons are not covered by the warranty.
- Defects caused by dropping the device or device parts are not covered by the warranty.
- Warranty documents not stamped and signed by the seller / dealer is invalid.
- The consumer, regarding the exercise of his rights arising from the guarantee In case of disputes that may arise, they can apply to the Consumer Arbitration Committee or the Consumer Court in the place of residence or where the consumer transaction is made.
- If this Warranty Certificate is not given by the seller, the consumer may apply to the General Directorate of Consumer Protection and Market Surveillance of the TR Ministry of Commerce.

SAFETY RULES

**WARNING: READ BEFORE USING THE DEVICE
IF THESE INSTRUCTIONS ARE NOT FOLLOWED,
ANY WARRANTY IS VOID.**

- Use PROMINI 30P Dry Type Vacuum Cleaner intended purpose and only for dry cleaning. Do not use for vacuuming water or other liquids.
- Always use original spare parts and accessories to protect the safety of your device. Warranty will not be valid for malfunctions caused by the use of unsuitable parts. For repair of spare parts, apply to the nearest FANSET authorized service.
- Do not use the device with a damaged cable.
- Do not vacuum harmful dust.
- Never use your device without a motor protection filter.
- Do not leave the plug of your cleaner plugged into the socket. When you are finished, turn off the device and remove the plug from the socket. Do not handle the plug with wet hands.
- If your appliance does not work for any reason, if there is any damage on the cable and plug, do not operate the vacuum cleaner and apply to the nearest FANSET authorized service.
- Do not carry your device by holding the cable.
- Only use the device as described in the user manual, do not use it for any other purpose.
- Do not use your vacuum cleaner for cleaning materials such as hot ash, razors and nails, as well as flammable liquids and oils.
- Keep your vacuum cleaner and its cord away from stoves, ovens and similar heat sources.
- Never use your device in or near explosive atmospheres and materials.
- In order to prevent the filters of your device from clogging and to extend the engine life; flour, drill powder, gypsum powder etc. Do not vacuum dust.
- Do not wash the engine compartment with water, do not immerse it in water or similar liquids.
- It can be used by children aged 8 years and above, and people with insufficient physical, emotional or mental capabilities or lack of experience and knowledge, as long as they are supervised or trained in the safe use of your device and its hazards. Children should not play with the device. Cleaning and user maintenance should not be performed by children unless they are supervised. Children under the age of 3 who are not under constant supervision should be kept away.
- Do not allow your device to be used as a toy by children and make sure that it is not used.

ASSEMBLY AND DRY VACUUMING

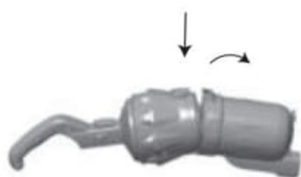

before using your device, as seen in the picture, on the motor body; Make sure that the cloth dust filter is installed in the dust chamber by pressing the body lock latch, if not, insert it.



Cloth dust filter; Use the dust bin by attaching it to the tabs on the filter cage plastic as seen in the picture.



Make sure that the body lock latch is locked by assembling the motor body and the dust container as shown in the picture.

TYPE 1



TYPE 2



TYPE 3




To lock the extension and the handle to the motor body, lock the lock slots by pushing them in opposite directions. You can use the extension tube of your device on the upper part as in Figure 1, on the lower part as in Figure 2 or without attaching the extension tube as in Figure 3. Depending on the surface you want to clean, you can attach the appropriate sweeping apparatus.

CLEANING AND STORAGE



NOTE: Before cleaning your device, always pull the plug from the socket.

For cleaning, firstly, open the bottom cover of the dust container and ensure that the dust is emptied into the trash.

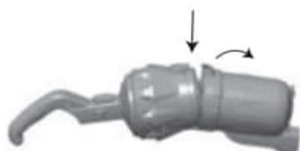


Then, detach the dust container from the motor body by pressing the body lock latch as shown in the picture.



Pull out the cloth dust filter inside the dust container and clean the filter by shaking it.

If your dust filter is excessively dusty, wash it with water only and dry it after washing. Place your cleaned and dried filter on the tabs on the filter mesh plastic for reuse.

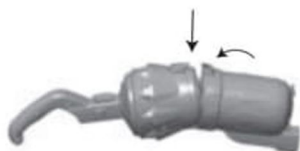

Place the ready cloth dust filter into the dust chamber and attach the dust chamber to the motor body.



NOTE: Do not wash the motor body of the device, do not immerse it in water. Wipe clean. You can also clean other accessories of your device by deleting them.

You can easily wrap the power cable on the extension tube as shown in the picture.

You can store your device without taking up space by attaching it to the vacuum cleaner hanger that you mount on the wall in your home or office as seen in the picture.

TECHNICAL SPECIFICATIONS / TECHNICAL SPECIFICATIONS

TYPE P5-E

Rated Voltage / **Rated Voltage** : 220-230 V AC

Rated Frequency / **Nominal Frequency** : 50 / 60 Hz

Rated Power / **Rated Power** : 500W

Max. Power / **Max.Power** : 800W

Net Weight / **Net Weight** : 1.87 kg

Complies with WEEE Regulation.



RoHS2
2011/65/EU

The service life determined by the Ministry is 10 years.

A.F. Company
MACHINE

www.afcmachine.com

AFC MAKINE SANAYI VE TICARET LIMITED SİRKETİ
Karakaş mahallesi, Zincirlikuyu 2. Geçidi Sokak No; 9/1
Kırklareli / Merkez



Tel: +90 539 116 0139